

## BENCH GRINDER STAND K15281



### GENERAL SAFETY INFORMATION



Save all warnings and instructions for future reference.


**WARNING!** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

### CAUTION


1. Before drilling into floor structures, ensure that there are no concealed power cables, plumbing pipes or electrical wires in the vicinity.
2. Inspect the Kincrome Bench Grinder Stand for any kind of defects prior to installation.
3. Ensure that you use adequate structural fasteners to install the stand to your structure. Obtain fastener type advise from your local hardware store or fastening specialist.

### Installing the Bench Grinder Stand

1. Remove bench grinder stand from packaging.
2. Dispose of packaging thoughtfully and in accordance with your local council laws.
3. Set the Kincrome Bench Grinder stand down on level, solid ground with the 4 small bolt holes facing down on the floor (Fig 1).
4. Find a suitable location to mount the bench grinder stand and mark the positions of the securing bolts on the floor, through the 4 holes in the base of the stand.
5. Ensure there is no underground service such as power, water, gas or data cabling systems running under the floor where the stand is to be mounted.
6. Move the stand aside and drill the required holes as per the specifications of the structural fasteners (not supplied). It is recommended that if the stand is to be bolted to a concrete floor, ensure there is a minimum concrete depth of 100mm and the minimum structural fastener specifications should be no less than 10mm in diameter x 75mm long).
7. Secure the stand to the floor and ensure the bolts are tight (do not overtighten).
8. Once the stand has been securely fastened to the floor, locate your piece of equipment that is to be mounted to the stand.
9. Line up the mounting holes in the base of the equipment, with the pre-cut slots on the mounting plate of the stand (Fig 2).  
**Note:** As some pieces of equipment have different bolt patterns, your bolt holes may not line up perfectly with the pre-cut slots in the mounting plate.  
In this instance, mark the bolt holes on the top of the mounting plate and drill new holes in the plate to suit.
10. Secure your equipment to the stand with adequate fasteners and ensure a spring washer or, 'Nyloc' style nut is utilised (bolts and fasteners not supplied).
11. Periodically inspect all fasteners to ensure they have not come loose during operation.

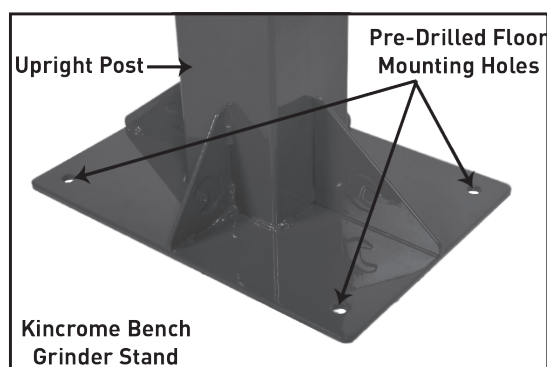

(Fig 1)

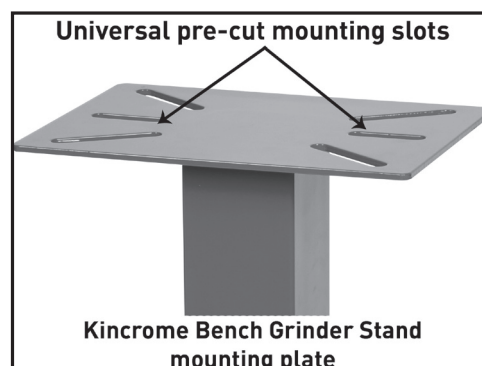

(Fig 2)

### Warranty

Warranty given by Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528). If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit [www.kincrome.com.au](http://www.kincrome.com.au) or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.

